


Material : Commercial Pure Titanium

Method No. : G02

Results

Microstructure consists of grains having equal axis. Since the material is soft, low sample forces should be applied during mechanical preparations.

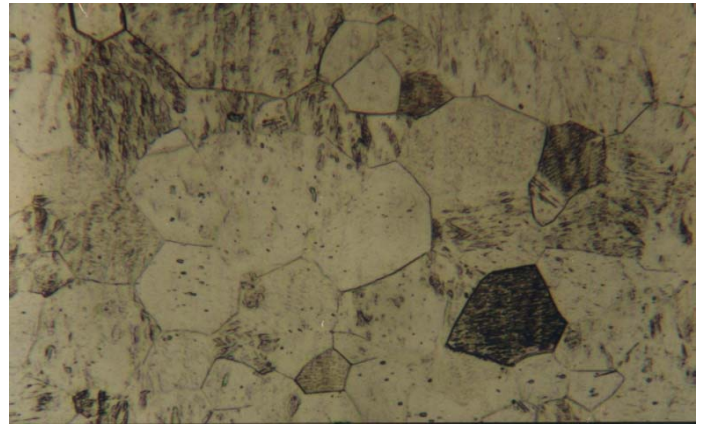

Commercial Pure Titanium, Brightfield
 Magnification: 270X Etching: Kroll solution

Preparation Method:

Cutting: Abrasive Cut-off machine with Metlab Abrasive Wheels

Mounting: Mounting Press with Phenolic Powder

Mechanical Preparation: Metpol-A

Steps	Surface	Abrasive	Lubricant	Force per Sample, (N)/(PSI)	Time min.	Disc Speed, rpm	Relative Rotation
1	PIANO	YELLOW	Water	25/5	1	250	Contra
2	PIANO	BLUE	Water	25/5	1	300	Contra
3	Dac Cloth	3 μ Diamond Suspension	Blue Lube	15/3	4	150	Contra
4	Metlab Cloth	1 μ Diamond Suspension	Blue Lube	15/3	1	150	Contra

FOR MORE DETAILED INFORMATION PLEASE REFER TO METLAB PRICE LIST